

Using your intercom

When your unit is called, the handset bell will sound. On picking up the handset, the sound from the doorstation will be heard. Pressing the key button will unlock the front door for a short period while the visitor makes their way to your unit.

How to use your handset

Handset



NOTE: Buttons labeled 0 to 3 are special function only, and not used in this installation.

Ring volume control knob

Red showing = no ring



Open door button

TAKE CARE

- always place handset back firmly but carefully
- do not wash the handset
- wipe with a clean cloth

Proudly installed and supported by
Bells Access Control Services



*FOR SUPPORT
Contact your estate agent or strata
manager for further details*