

Samsung DVR User Guide

live

Login

To access a DVR or restricted menu, you should have logged in to the DVR.


1. In live mode, right-click any area of the screen.
You will see the context sensitive menu as in the right figure.



2. Click <Login>.
The login dialog appears.
You can also see the login dialog to access a desired menu by pressing the [MENU] button on the remote control or the front panel.

- The login dialog will also appear if you press a menu button on the remote control or the front panel of the DVR when the corresponding menu requires logging in.
- By default, initial ID and password are set to "admin", and "4321".



- 
 ▪ The default password can be exposed to a hacking thread so it is recommended to change the password after installing the product.
Note that the security and other related issues caused by the unchanged password shall be responsible for the user.

- 
 ▪ For the restricted permission, refer to "Permission Management > Setting Permissions". (Page 41)


SEARCH

You can perform the search for recorded data by the time or by the search criteria such as an event. You can access the <Search> menu directly in Live mode.

1. In Live mode, right-click any area of the screen. The Live menu appears.
2. Select <Search>. Or, press the [SEARCH] button on the remote control or the front panel.



3. The Search menu appears.
 - If you have not checked "POS USE" in the "Main Menu > Device > POS Device" menu, the Search menu does not include the "POS Search" item. (Page 50)
4. The search can be restricted by the Auto Delete function. Refer to "Setting the Recording > Record Option". (Page 56)

- 
 - Overlapped data : It only appears if there exists overlapped data on a certain time, produced due to the change of DVR's time setup. The latest data comes first, from <List0>. It does not appear in <Backup Search>.



Time Search

You can search for recorded data of a desired time.

As the time to display may be different depending on the time zone and the DST standard time, the time of data recorded in the same time can be displayed differently depending on time zone and DST settings.

Using the mouse may help make setup easier.

1. Select <Time Search> in the <Search> menu.
2. Select a date to search.
 - Refer to "Using the Calendar". (Page 37)
3. The record data on the specific date will be listed. The display bar is different according to the data type. So check the data type for the color in the left pane.
4. Use direction buttons (▲▼◀▶) to set the search criteria and press the [ENTER] button.
 - Go to First : Moves to the earliest date.
 - Go to Last : Moves to the most recent date.
 - Time : Enter a time to perform the search or use the up/down button <◆> to select one.
 - Previous/Next Page : Moves to the previous / next page. (Use the remote control or the buttons on the front panel.)



70 search & play

- Zoom In : The map enlarges in detail. It will switch in the sequence of 24 hours - 16 hours - 8 hour - 4 hours.
- Zoom Out : The map will switch in the reverse order of the detailed mode above. It will switch in the sequence of 4 hours - 8 hour - 16 hours - 24 hours.



▪ Double-click a desired time to zoom it in/out.

- Preview : Click <Channel> and select (click, drag) a time in <Duration> to display a still image for the portion.
 - If the selected channel does not contain any recorded data, it will be marked black.
- 5. Select a data item and click <Play>. The screen switches to the data playback mode.



PLAYBACK

Play

You can play data stored in the HDD and backup a desired portion of the data. Using the mouse may help make setup easier.

1. In Live mode, click **<Play>** in the right-click menu or **<▶>** in the launcher menu, or press the Play button on the remote control or the front panel.
2. Use the up/down button (**▲▼**) to select a menu.
 - For data search, refer to **<Search>**. (Page 70)



3. Select a data item and click **<Play>** in the Search menu. The selected data is played and the play launcher appears on the screen.
 - If there is an existing data, **<Play>** will start immediately without performing the search.
- Playback Information : Displays the date and time of the current data in the top corner.



BACKUP

- Backup : Click **<🕒>** to set the current time to the start time of backup; you can specify a backup area using the mouse (yellow triangle). Click **<🕒>** again to set the current time to the end time of the backup and the **"Backup Range"** window appears.
 - Type : Supports formats of DVR, AVI and SEC. Refer to a list of formats in **"Setting the Backup"**. (Page 60)
 - Device : Select a backup device.
 - Check Capacity : Enables you to check the capacity of the selected storage device.



4. If you want to return to the Live screen in Play mode, click **<■>** in the launcher menu or press the **[■]** button on the remote control or the front panel.