


# Using your handsfree intercom monitor

When your unit is called, the monitor bell will sound and LED light glow. On pressing the Speak button, you can see and talk with the visitor. Pressing the Open button will unlock the front door (and lift if required) for a short period while the visitor makes their way to your unit. Do not wash or paint. Clean with a damp cloth only.

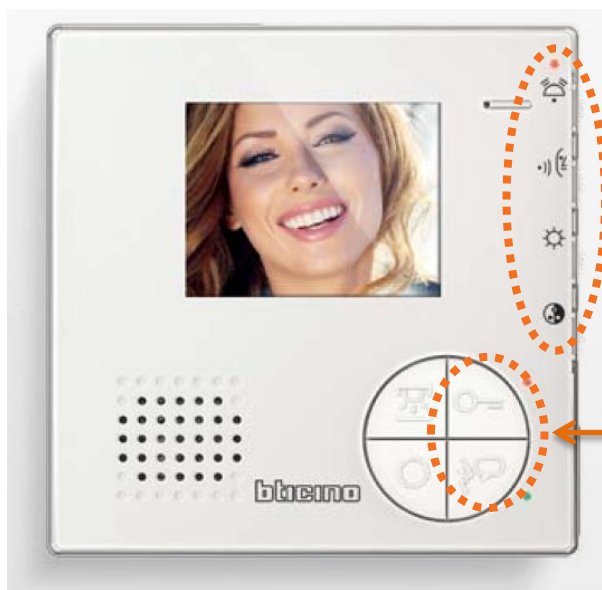

## Where things are

Monitor adjustments

Speak/release buttons

## Using the system

When visitor calls ...




Press to open line & speak



Press to release door/lift



Press to close the line

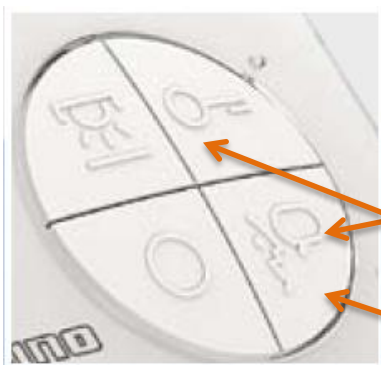

Ringer volume

Speaker volume

Screen brightness

For service, please contact your building manager or agent.