


Using your intercom monitor

When your unit is called, the monitor bell will sound and LED light glow. On picking up the handpiece, you can see and talk with the visitor. Pressing the Open button will unlock the front door (and lift if required) for a short period while the visitor makes their way to your unit. Then hangup to complete the call.

Do not wash or paint. Clean with a damp cloth only.

Where things are

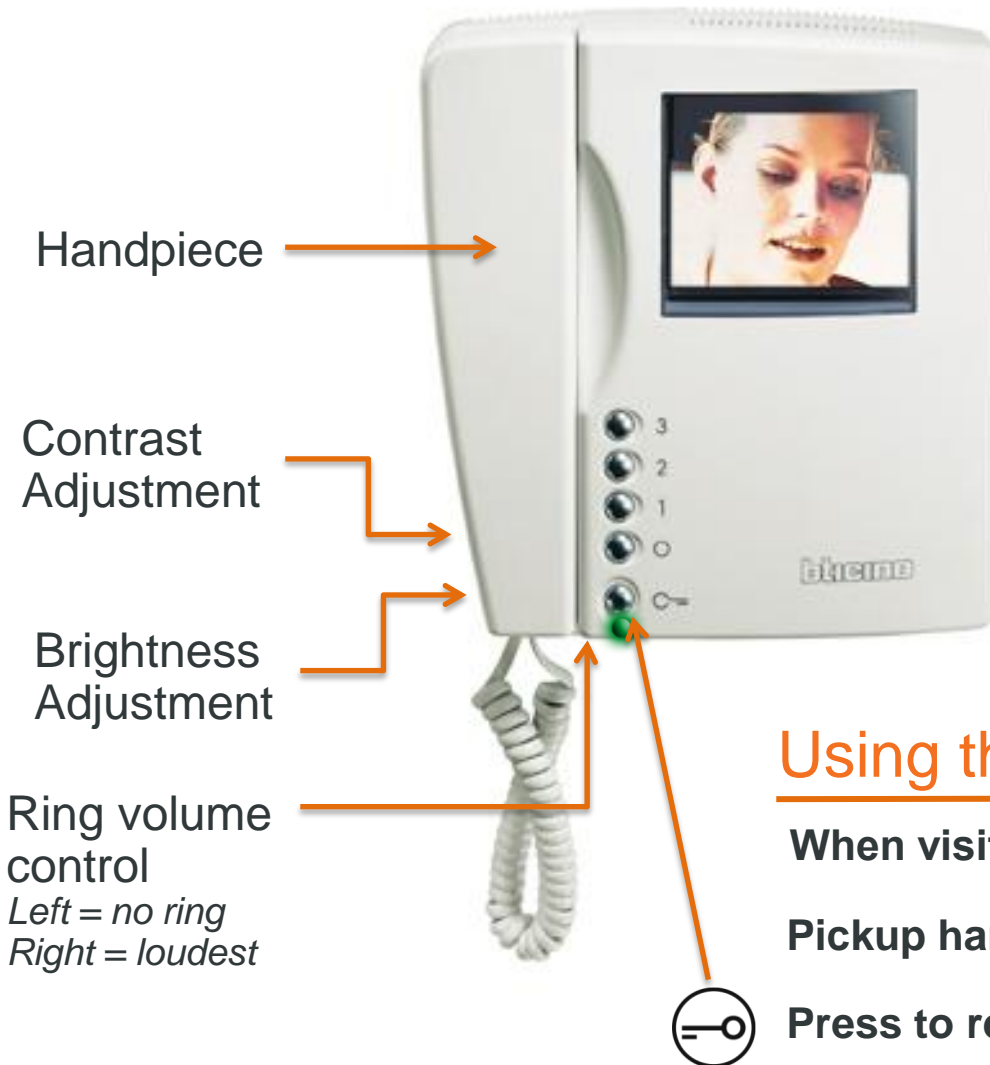

Using the system

When visitor calls ...

Pickup handpiece & speak

Press to release door/lift

Hangup to complete

NOTE: Buttons labeled 0 to 3 are special function only, and not used in this installation.